

Handheld Thermography Camera HIKMICRO Pocket Series

User Manual

Legal Information

©2022 Hangzhou Microimage Software Co., Ltd. All rights reserved.

About this Manual

The Manual includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of this Manual at the HIKMICRO website (*http://www.hikmicrotech.com*).

Please use this Manual with the guidance and assistance of professionals trained in supporting the Product.

Trademarks

HIKMICRO and other HIKMICRO's trademarks and logos are the properties of HIKMICRO in various jurisdictions. Other trademarks and logos mentioned are the properties of their respective owners.

Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS MANUAL AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKMICRO MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKMICRO BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKMICRO HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS. YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKMICRO SHALL NOT TAKE ANY **RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR** OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKMICRO WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED. YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION. THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATTER PREVAILS.

Regulatory Information

FCC Information

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC compliance: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help

FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.

2. This device must accept any interference received, including interference that may cause undesired operation.

Note: Due to the device size limit, the above statement may not be disclaimed on the device.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

EU Conformity Statement

This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the Directive 2014/30/EU (EMCD), Directive 2014/35/EU (LVD), Directive 2011/65/EU (RoHS).



UK This product and - if applicable - the supplied accessories too are marked with "UKCA" and comply therefore with the following directives: Radio Equipment Regulations 2017, Electromagnetic Compatibility Regulations 2016, Electrical Equipment (Safety) Regulations 2016, the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012.

Restrictions in the 5 GHz band:

According to Article 10 (10) of Directive 2014/53/EU, when operating in the 5150 to 5350 MHz frequency range, this device is restricted to indoor use in: Austria (AT), Belgium (BE), Bulgaria (BG), Croatia (HR), Cyprus (CY), the Czech Republic (CZ), Denmark (DK), Estonia (EE), Finland (FI), France (FR), Germany (DE), Greece (EL), Hungary (HU), Iceland (IS), Ireland (IE), Italy (IT), Latvia (LV), Liechtenstein (LI), Lithuania (LT), Luxembourg (LU), Malta (MT), Netherlands (NL), Northern Ireland (UK(NI)), Norway (NO), Poland (PL), Portugal (PT), Romania (RO), Slovakia (SK), Slovenia (SI), Spain (ES), Sweden (SE), Switzerland (CH), and Turkey (TR).

In accordance with the Radio Equipment Regulations 2017 in the UK, the device working in the 5150 to 5350 MHz

frequency range is restricted to indoor use in the United Kingdom.

Frequency Bands and Power (for CE/UKCA)

The frequency bands and modes and transmitting power (radiated and/or conducted) nominal limits applicable to the following radio equipment are as follows:

Wi-Fi: 2.4 GHz (2.4 GHz to 2.4835 GHz): 20 dBm; 5 GHz (5.15 GHz to 5.25 GHz): 23 dBm; 5 GHz (5.25 GHz to 5.35 GHz): 23 dBm; 5 GHz (5.47 GHz to 5.725GHz): 23 dBm; 5 GHz (5.725 GHz to 5.85 GHz): 14 dBm

Bluetooth: 24 GHz (2.4 GHz to 2.4835 GHz): 20 dBm

Use the power adapter provided by a qualified manufacturer. Refer to the product specification for detailed power requirements.

Use the battery provided by a qualified manufacturer. Refer to the product specification for detailed battery requirements.



Directive 2012/19/EU (WEEE Directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info

According to the Waste Electrical and Electronic Equipment Regulations 2013: Products marked with this symbol cannot be disposed of as unsorted municipal waste in the United Kingdom. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info.



Directive 2006/66/EC and its amendment 2013/56/EU (Battery Directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: <u>www.recyclethis.info</u>

According to the Batteries and Accumulators (Placing on the Market) Regulations 2008 and the Waste Batteries and Accumulators Regulations 2009: This product contains a battery that cannot be disposed of as unsorted municipal waste in the United Kingdom. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info.

Industry Canada ICES-003 Compliance

This device meets the CAN ICES-003 (B)/NMB-003 (B) standards requirements.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and

(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radioexempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment.

ce matériel est conforme aux limites de dose d'exposition aux rayonnements, CNR-102 énoncée dans un autre environnement.

(i) The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;

(ii) The maximum antenna gain permitted for devices in the bands 5250-5350 MHz and 5470-5725 MHz shall comply with the e.i.r.p. limit; and (iii) The maximum antenna gain permitted for devices in the band 5725-5825 MHz shall comply with the e.i.r.p. limits specified for point-to-point and non point-to-point operation as appropriate.

(i) Les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.

(ii) Le gain d'antenne maximal autorisé pour les appareils dans les bandes
5250-5350 MHz et 5470-5725 MHz doivent respecter le pire limiter; et
(iii) Le gain d'antenne maximal autorisé pour les appareils dans la bande
5725-5825 MHz doivent respecter le pire limites spécifiées pour le pointà-point et l'exploitation non point à point, le cas échéant.

КС

B급 기기: 이 기기는 가정용(B급) 전자파적합기기로써 주로 가정에서

Handheld Thermography Camera Pocket Series User Manual

사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
A Danger	Indicates a hazardous situation which, if not avoided, will or could result in death or serious injury.
A Caution	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
I iNote	Provides additional information to emphasize or supplement important points of the main text.

Safety Instruction

These instructions are intended to ensure that user can use the product correctly to avoid danger or property loss.

Laws and Regulations

• Use of the product must be in strict compliance with the local electrical safety regulations.

Transportation

- Keep the device in original or similar packaging while transporting it.
- Keep all wrappers after unpacking them for future use. In case of any failure occurred, you need to return the device to the factory with the original wrapper. Transportation without the original wrapper may result in damage on the device and the company shall not take any responsibilities.
- DO NOT drop the product or subject it to physical shock. Keep the device away from magnetic interference.

Power Supply

- Input voltage should meet the Limited Power Source (3.85 VDC, 570 mA) according to the IEC62368 standard. Please refer to technical specifications for detailed information.
- Make sure the plug is properly connected to the power socket.
- DO NOT connect multiple devices to one power adapter, to avoid overheating or fire hazards caused by overload.
- Use the power adapter provided by a qualified manufacturer. Refer to the product specification for detailed power requirements.

Battery

• Improper use or replacement of the battery may result in explosion hazard. Replace with the same or equivalent type only. Dispose of used batteries in conformance with the instructions provided by the battery

manufacturer.

- The built-in battery cannot be dismantled. Please contact the manufacture for repair if necessary.
- For long-term storage of the battery, make sure it is fully charged every half year to ensure the battery quality. Otherwise, damage may occur.
- Use the battery provided by a qualified manufacturer. Refer to the product specification for detailed battery requirements.
- DO NOT charge other battery types with the supplied charger. Confirm there is no flammable material within 2 m of the charger during charging.
- DO NOT place the battery near heating or fire source. Avoid direct sunlight.
- DO NOT swallow the battery to avoid chemical burns.
- DO NOT place the battery in the reach of children.
- When the device is powered off and the RTC battery is full, the time settings can be kept for 6 months.
- In the first use, charge the device for more than 2.5 hours in the poweroff status.
- The lithium battery voltage is 3.85 V, and the battery capacity is 2100 mAh.
- The battery is certified by UL2054.

Maintenance

- If the product does not work properly, please contact your dealer or the nearest service center. We shall not assume any responsibility for problems caused by unauthorized repair or maintenance.
- A few device components (e.g., electrolytic capacitor) require regular replacement. The average lifespan varies, so periodic checking is recommended. Contact your dealer for details.
- Wipe the device gently with a clean cloth and a small quantity of ethanol, if necessary.
- If the equipment is used in a manner not specified by the manufacturer, the protection provided by the device may be impaired.

- Please notice that the current limit of USB 3.0 PowerShare port may vary with the PC brand, which is likely to result in incompatibility issue. Therefore, it's advised to use regular USB 3.0 or USB 2.0 port if the USB device fails to be recognized by PC via USB 3.0 PowerShare port.
- Your camera will periodically perform a self-calibration to optimize image quality and measurement accuracy. In this process, the image will pause briefly and you will hear a "click" as a shutter moves in front of the detector. The self-calibration will be more frequent during start up or in very cold or hot environments. This is a normal part of operation to ensure optimum performance for your camera.

Calibration Service

• We recommend you send the device back for calibration once a year, and please contact the local dealer for the information on maintenance points. For more detailed calibration services, please refer to https://www.hikmicrotech.com/en/calibrationservices/2.

Using Environment

- Make sure the running environment meets the requirement of the device. The operating temperature shall be -10 °C to 50 °C (14 °F to 122 °F), and the operating humidity shall be 95% or less.
- This device can only be safely used in the region below 2000 meters above the sea level.
- Place the device in a dry and well-ventilated environment.
- DO NOT expose the device to high electromagnetic radiation or dusty environments.
- DO NOT aim the lens at the sun or any other bright light.
- When any laser equipment is in use, make sure that the device lens is not exposed to the laser beam, or it may burn out.
- DO NOT aim the lens at the sun or any other bright light.
- The device is suitable for indoor and outdoor uses, but do not expose it in wet conditions.
- The level of protection is IP 54.

• The pollution degree is 2.

Technical Support

The *https://www.hikmicrotech.com* portal will help you as a HIKMICRO customer to get the most out of your HIKMICRO products. The portal gives you access to our support team, software and documentation, service contacts, etc.

Emergency

• If smoke, odor, or noise arises from the device, immediately turn off the power, unplug the power cable, and contact the service center.

Manufacture Address

Room 313, Unit B, Building 2, 399 Danfeng Road, Xixing Subdistrict, Binjiang District, Hangzhou, Zhejiang 310052, China Hangzhou Microimage Software Co., Ltd.

COMPLIANCE NOTICE: The thermal series products might be subject to export controls in various countries or regions, including without limitation, the United States, European Union, United Kingdom and/or other member countries of the Wassenaar Arrangement. Please consult your professional legal or compliance expert or local government authorities for any necessary export license requirements if you intend to transfer, export, re-export the thermal series products between different countries.

Contents

Chapter 1 Overview 1
1.1 Device Description 1
1.2 Main Function 1
1.3 Appearance
Chapter 2 Preparation5
2.1 Charge Device
2.2 Power On/Off 5
2.2.1 Set Auto Power-off Duration5
2.3 Operation Method 5
2.4 Menu Description
Chapter 3 Display Settings7
3.1 Set Screen Brightness 7
3.2 Set Display Mode 7
3.3 Set Palettes
3.4 Adjust Digital Zoom 10
3.5 Display OSD Info 10
Chapter 4 Temperature Measurement 12
4.1 Set Thermography Parameters12
4.1.1 Set Unit
4.2 Set Level & Span 13
4.3 Set Thermography Rule 14
4.4 Set Temperature Alarm14

Chapter 5 Picture and Video	16
5.1 Capture Picture	16
5.2 Record Video	17
5.3 Manage Albums	17
5.4 View Recorded Files	19
5.5 Manage Files	20
5.6 Export Files	22
Chapter 6 Connect Bluetooth	24
Chapter 7 Set LED Light	25
Chapter 8 Cast Screen	26
Chapter 9 Set Macro Mode	27
Chapter 10 Thermal View APP Connection	28
10.1 Connect via Wi-Fi	28
10.2 Connect via Hotspot	29
Chapter 11 Maintenance	31
11.1 View Device Information	31
11.2 Set Date and Time	31
11.3 Upgrade Device	31
11.4 Restore Device	32
Chapter 12 Appendix	33
12.1 Common Material Emissivity Reference	33
12.2 Device Command	33
12.3 Device Communication Matrix	34
12.4 FAQ	34

Chapter 1 Overview

1.1 Device Description

The handheld thermography camera is a device with both optical images and thermal images. It can do thermography, video recording, snapshot capturing, alarm, and it can connect to Wi-Fi, hotspot and Bluetooth. The built-in high-sensitivity IR detector and high-performance sensor detects the variation of temperature and measure the real-time temperature. The temperature measurement range is -20 °C to 400 °C (-4 °F to 752 °F), with the accuracy of \pm 2 °C (\pm 3.6 °F) or 2% when the ambient temperature is 15 °C to 35 °C (59 °F to 95 °F) and the object temperature is above 0 °C (32 °F).

The device is easy to use, and adopts ergonomic design. It is widely used for building inspection, HVAC, as well as electrical and mechanical equipment maintenance.

1.2 Main Function

Thermography

Device detects the real-time temperature, and displays it on the screen.

Fusion

Device can display fusion of thermal view and optical view.

Palette and Alarm

Device supports multiple palettes, and you can set the palette mode according to the alarm function.

Client Software Connection

• Mobile Phone: You can view live view, capture snapshots, and record

videos via HIKMICRO Viewer App on your phone. You can also, analyze pictures offline, generate and share a report via the app. Scan the QR codes on the cover to download the App.



HIKMICRO Viewer Android




HIKMICRO Viewer iOS

 PC: You can download HIKMICRO Analyzer (https://www.hikmicrotech.com) to analyze pictures offline professionally, and generate a custom format report on your PC.


Bluetooth

Device can be connected to headset via Bluetooth, and you can hear the voice in the recording.

1.3 Appearance

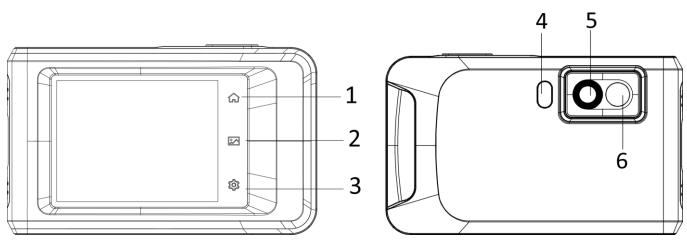

Handheld Thermography Camera Pocket Series User Manual

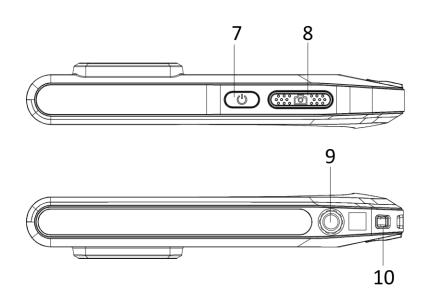

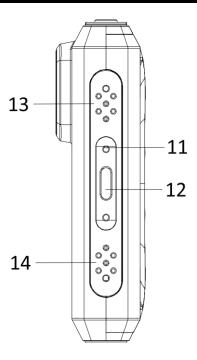


Figure 1-1 Appearance

Table 1-1 Button and Interface Description

No.	Description	Function
1	Home Key	Tap to return to the live view interface.
2	File Key	Tap to enter albums.
3	Settings Key	Tap to enter settings interface.
4	Flash Light	Fill light on objects and output flashing alarm.
5	Thermal Lens	View the thermal image.
6	Optical Lens	View the optical image.
7	Power Key	Hold to power on/off the device.
		 Press in live view mode: capture snapshots/stop recording
8	Capture Key	 Press in menu mode: return to the live view interface
		 Hold: start recording

No.	Description	Function
9	Tripod Mount	Mount the tripod.
10	Strap Attachment Point	Mount the strap.
		Indicate the charging status of the device.
11	Indicator	 Solid red: charging normally
11	mulcator	 Flashing red: charging exception
		 Solid green: fully charged
12	Type-C Interface	Charge the device or export files with Type-C cable.
13	Buzzer	Output audible alarm.
14	Microphone	Record audio.

iNote

Your camera will periodically perform a self-calibration to optimize image quality and measurement accuracy. In this process, the image will pause briefly and you'll hear a "click" as a shutter moves in front of the detector. The prompt "Calibrating ..." appears in the upper center of the screen as the device is calibrating itself. The self-calibration will be more frequent during start up or in very cold or hot environments. This is a normal part of operation to ensure optimum performance for your camera.

Chapter 2 Preparation

2.1 Charge Device

Plug in the cable, and connect the device to the power supply to charge the battery.

2.2 Power On/Off

Power On

Hold \bigcirc for over three seconds to turn on the device. You can observe the target when the interface of the device is stable.

iNote

It may take at least 30 s until the device is ready for using when you power on it.

Power Off

When the device is turned on, hold \bigcirc for about three seconds to power off the device.

2.2.1 Set Auto Power-off Duration

Go to Local Settings \rightarrow Device Settings \rightarrow Auto Off to set the automatic shutdown time for device as required.


2.3 Operation Method

The device supports touch-screen control. You can tap the screen to set

parameters and configurations.

2.4 Menu Description

In the observation interface, tap the screen to show the menu bar, and swipe down to call the swipe-down menu.

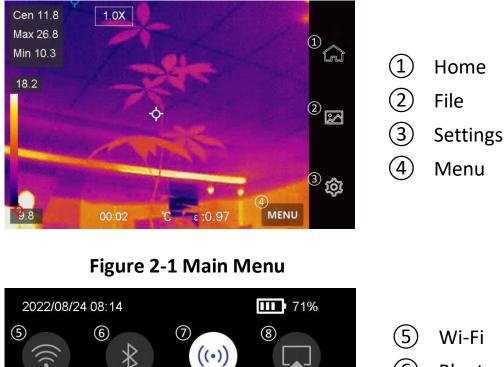

- 6 Bluetooth
- $\overline{\mathcal{O}}$ Hotspot
- 8 Screen Cast
- 9 Flashlight
- 10 Auto-Rotate
- (11) Dark/Bright Mode

Figure 2-2 Swipe-Down Menu

(11)

10

 \sim

Storage Space 13.18GB / 13.20GB

9

-<u>Ò</u>

Chapter 3 Display Settings

3.1 Set Screen Brightness

You can drag the brightness adjustment slider in the swipe-down menu.



Figure 3-1 Adjust Brightness via Swipe-Down Menu

3.2 Set Display Mode

You can set the thermal/optical view of the device. **Thermal**, **Fusion**, **PIP**, **Optical**, and **Blending** are selectable.

Steps

- 1. Tap Menu, and select <a>Image.
- 2. Tap the icons to select a view mode.

In thermal mode, the device displays the thermal view.

In fusion mode, the device displays the combined view of thermal channel and optical channel.

iNote

When selecting the fusion mode, you need to set the parallax correction in the live view interface according to the distance to the target, so as to better overlap the thermal and optical images.

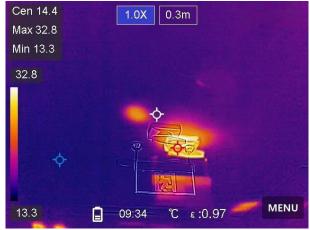


Figure 3-2 Adjust Parallax Correction

In PIP (Picture in Picture) mode, the device displays thermal view inside the optical view.

iNote

You can adjust the size, distance and digital zoom of the PIP.

2


In optical mode, the device displays the optical view.

(

In blending mode, the device displays the mixture view of thermal channel and optical channel. You can adjust the **Optical-Thermal Ratio** to change the optical-thermal ratio. The lower the value is, the better the optical effect is.

iNote

When selecting the blending mode, you can adjust the **Optical-Thermal Ratio** from **0** to **100** in the live view interface. The higher the value is, the clearer the thermal images are.

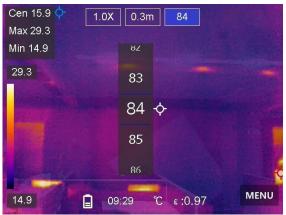



3. Press Back to exit.

3.3 Set Palettes

The palettes allow you to select the desired colors.

Steps

- 1. Tap Menu, and select I.
- 2. Tap the icons to select a palette type.

White Hot

The hot part is light-colored in view.

Black Hot

The hot part is black-colored in view.

Rainbow

The target displays multiple colors. It is suitable for scene without obvious temperature difference.

Ironbow

The target is colored as heated iron.

Red Hot

The hot part is red-colored in view.

Fusion

The hot part is yellow-colored and the cold part is purple-colored in view.

Rain

The hot part in the image are colored, and the else is blue.

3. Press **Back** to exit the setting interface.

3.4 Adjust Digital Zoom

Steps

- 1. Tap the live view interface to call the digital zoom frame.
- 2. Tap the digital zoom frame.

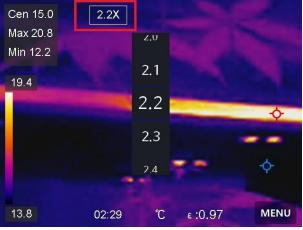


Figure 3-4 Adjust Digital Zoom

- 2. Select the digital zoom value as required
- 3. Tap the screen to save and exit.

3.5 Display OSD Info

Go to Local Settings \rightarrow Device Settings \rightarrow Display Settings to enable the

information on-screen display.

Time

Device time and date.

Parameters

Thermography parameters, for example, target emissivity, temperature unit, etc.

Brand Logo

The brand logo is a manufacturer logo displayed on the upper right corner of the screen.

Chapter 4 Temperature Measurement

The thermography (temperature measurement) function provides the real-time temperature of the scene and display it on the left of your screen. The thermography function is turned on by default.

4.1 Set Thermography Parameters

You can set thermography parameters to improve the accuracy of temperature measurement.

Steps

- 1. Go to Local Settings \rightarrow Thermography Settings.
- 2. Set the Thermography Range, Emissivity, etc.

Thermography Range

Select the temperature measurement range. The device can detect the temperature and switch thermography range automatically in **Auto Switch** mode.

Emissivity

Refer to *<u>Common Material Emissivity Reference</u>* to set the emissivity of your target.

Reflection Temperature

If any object (not the target) of high temperature is in the scene, and the target emissivity is low, set the reflection temperature as the high temperature to correct the thermography effect.

Distance

The distance between the target and the device. You can customize the target distance or select the target distance as **Near**, **Middle**, or **Far**.

Humidity

Set the relative humidity of current environment.

3. Return to previous menu to save the settings.

iNote

You can go to Local Settings \rightarrow Device Settings \rightarrow Device Initialization \rightarrow Measurement Tool Initialization to initialize the temperature measurement parameters.

4.1.1 Set Unit

Go to Local Settings \rightarrow Device Settings \rightarrow Unit to set the temperature unit and distance unit.

4.2 Set Level & Span

You can adjust the temperature range with the Level & Span function. Set a temperature section and the palette only works for targets within the temperature section. The Level & Span can be manually or automatically adjusted to achieve a good thermal effect for better temperature difference analysis.

Steps

- 1. Tap **Menu**, and select 🖉.
- 2. Select auto adjustment 🔠 or manual adjustment 🚺

Auto Adjustment	Select III. The device adjusts temperature range parameters automatically.
Manual Adjustment	 Select . There are 2 ways to manually adjust the range: Adjust the temperature range based on selected area. Tap an interest area of the screen. A circle is displayed around the area, and the palette

readjusts to the temperature range of the area.

- Adjust the maximum and minimum temperature of the range.
 - Tap to select the max. temperature, min. temperature, or both. You can also tap the max. temperature or min. temperature at the ends of the palette bar to select them.
 - Tap the arrows on the left side of the screen to adjust the temperature value.
- 3. Press **Back** to exit.

4.3 Set Thermography Rule

You can set thermography rules to measure the min., max., and center temperatures of the current scene.

Steps

- 1. Tap Menu, and select <a>[<-> .
- 2. Tap to select the thermography rule as required. Hot, Cold, and Center are selectable.
- 3. Tap **Back** to save and exit.

iNote

- The min., max., and center temperatures are displayed on the left top of the screen.
- Tap the rule again to delete the rule.

4.4 Set Temperature Alarm

When the temperature of targets triggers the set alarm rule, the device will perform configured actions, such as making audible warning and flash

alarm, and sending notification to the client software.

Steps

- 1. Go to Local Settings \rightarrow Thermography Settings \rightarrow Alarm Settings \rightarrow Temperature Alarm.
- 2. Enable the function and set the alarm threshold and alert threshold.

Alarm Threshold

When the tested temperature exceeds the threshold, the device sends alarm notification to the client software. The device will buzz if the audible warning is enabled, and the flashlight will flash if the flashing alarm is enabled.

Alert Threshold

When the tested temperature exceeds the threshold, the device sends alert notification to the client software.

- 3. Go to Local Settings \rightarrow Thermography Settings \rightarrow Alarm Settings \rightarrow Alarm Linkage.
- 4. Enable Audible Warning, Flash Alarm, or both.

Audible Warning

The device buzzes when target temperature exceeds the alarm threshold.

Flash Alarm

The flashlight will flash when target temperature exceeds the alarm threshold.

4. Tap < to save and exit.

Chapter 5 Picture and Video

Insert memory card into the device, and then you can record videos, capture snapshots, and mark and save important data.

iNote

- The device does not support capturing or recording when the menu is shown.
- When the device is connected to your PC, it does not support capturing or recording.
- Go to Local Settings → Capture Settings → Filename Header, you can set the filename header for capturing or recording to distinguish the files recorded in a specify scene.

5.1 Capture Picture

Before You Start

Enable the flashlight via the swipe-down menu in dark environment.

Steps

- 1. Go to Local Settings \rightarrow Capture Settings.
- 2. Select **Photo Settings** to set the capture mode.

Single Capture	Capture one picture for one time.
Continuous Capture	Capture multiple pictures for one time. You can set the amount of pictures.
Timed Capture	Device captures one picture after the specified time interval. You can set the time interval as needed.

3. Optional: Set **Visible Image Resolution** for the captured optical image as needed.

- 4. Optional: Enable **Save Optical Picture.** The device will capture both radiometric and optical pictures simultaneously.
- 5. Press < to exit.
- 6. In the live view interface, press the capture key to capture snapshot.
- 7. Refer to *Export Files* to export the snapshots.

5.2 Record Video

Before You Start

Enable the flashlight via the swipe-down menu in dark environment.

Steps

1. In the live view interface, hold the capture key to start recording. The recording icon and count down number display in the interface.



Figure 5-1 Record Video

- 2. When you finish, press the capture key to stop recording. The recording video will be saved automatically.
- 3. Refer to *Export Files* to export the videos.

5.3 Manage Albums

The recorded image/video files are saved in the albums. You can create new albums, rename an album, change the default album, move files

between the albums, and delete albums.

Task	Operations
Create a New Album	 Press to enter Albums. Tap to add a new album. A soft keyboard is displayed, where you can enter the name of the album by touching the screen. Tap ✓ to finish.
	Note The newly created album becomes the default saving album and appears at the top of the album list.
Rename an Album	 Press I to enter Albums. Select the album to rename. Tap, and select Rename. A soft keyboard is displayed. Tap I to delete the old name, and enter the new name for the album by touching the screen. Tap I to finish.
Change the Default Saving Album	 Press is to enter Albums. Select the album you want to use as the default saving album. Tap, and select Set as Default Saving Album.

Task	Operations
	Note The default saving album appears at the top of the album list.
	 Press loss to enter Albums. Select the album you want to delete. Tap, and select Delete. A prompt box appears on the interface. Tap OK to delete the album.
Delete an Album	Note The files in an album are deleted as well when deleting the album. Move the files to other albums if they are still needed. See <u>Manage</u> <u>Files</u> for instructions.

5.4 View Recorded Files

Steps

- 1. Press 🖾 to enter Albums.
- 2. Tap to select the album storing the files.
- 3. Tap to select the video or snapshot to view.
- 4. View the selected file and relevant information.



Figure 5-2 View a File

iNote

- Files are arranged in chronological order, with the most recent at the top. If you fails to find the most recently taken snapshots or videos, please check the time and date settings of your device. See <u>Set Date</u>
 <u>and Time</u> for instructions. When you are viewing files, you can switch to other files by tapping or .
- For more information contained in capture snapshots or videos, you can install the thermography client to analyze them.

5.5 Manage Files

You can move, delete, edit the recorded files, and add text notes to the files.

Task	Operations
	1. Press 🔟 to enter Albums .
Delete a File	Tap to select the album storing the file to be deleted.
	3. In the album, tap to view the file to be deleted.

Task	Operations
	 4. Tap the screen to show the menu bar below, and tap and tap A prompt box appears on the interface. 5 Tap OK to delete the file.
Delete Multiple Files	 Press lo enter Albums. Tap to select the album storing the files to be deleted. In the album, tap l, and tap the files to be deleted. Tap l. A prompt box appears on the interface. Tap OK to delete the files.
Move a File	 Press location to enter Albums. Tap to select the album storing the file to be moved. In the album, tap to view the file to be moved. Tap the file to show the menu bar below, and select location. The album list is displayed. Tap to select the album to move to.
Move Multiple Files	 Press I to enter Albums. Tap to select the album storing the files to be moved.

Task	Operations
	3. In the album, tap 🗹 to select the files to be
	moved.
	4. Tap 🛃. The album list is displayed.
	5. Tap to select the album to move to.
	I INote
	You can also move a single file in this way.
	1. Press 📧 to enter Albums .
Add Text Note on File	 Tap to select the album storing the file to be edited.
	3. In the album, tap to view the file to be edited.
	 Tap the screen to show the menu bar below, and tap A soft keyboard is displayed.
	5. Enter the text note by touching the screen.
	6. Tap 🗹 to finish.
	What to do next
	You can open the edited photo to view the text note.
iNote	

You can tap \checkmark to select all files, and tap = to cancel the selection.

5.6 Export Files

Connect the device to your PC with supplied cable, you can export the

recorded videos and captured snapshots.

Steps

- 1. Connect the device to your PC with cable and open the detected disk.
- 2. Select and copy the videos or snapshots to PC to view the files.
- 3. Disconnect the device from your PC.

iNote

- Please make sure to disable **Cast Screen** before connecting the device to your PC.
- For the first-time connection, the driver will be installed automatically.

Chapter 6 Connect Bluetooth

You can record and hear the sound contained in the videos via bluetooth headsets after pairing the device with bluetooth headsets successfully.

Steps

- 1. Select 📓 from the main menu.
- 2. Go to Local Settings \rightarrow Connect \rightarrow Bluetooth.
- 3. Tap **T** to enable **Bluetooth**.

iNote

You can also press < to quit pairing.

The device will search the nearby enabled bluetooth headsets and pair them automatically.

Result

After pairing you can record and hear the sound via the headsets while recording and playing the video.

Chapter 7 Set LED Light

Tap the flashlight button on the swipe-down menu to enable the LED light.

Chapter 8 Cast Screen

You can connect the device to your PC via a type-C cable, and cast the real-time live view of the device to your PC through the UVC alarm client. Then you can synchronously view the live view and parameters such as the maximum temperature, the distance, and the emissivity on your PC.

Before You Start

Download the UVC Alarm Client from HIKMICRO official website, and install the client on your PC. Refer to the user manual of the client for detailed operation.

Steps

- 1. Select 📱 from the main menu.
- 2. Go to Local Settings \rightarrow Connect \rightarrow Cast Screen.
- 3. Tap **Constant** to enable the function.
- 4. Open UVC Alarm Client on your PC.
- 5. Connect the device to your PC via a type-C cable.

iNote

Exporting files via USB connection is not allowed when you are casting the screen.

Result

The live view interface and parameters of the current image will be synchronously displayed on your PC.

Chapter 9 Set Macro Mode

In the macro mode, you can focus extremely close on a very small object, and the object appears much larger in the view (and in the final image) compared to the standard lens.

Before You Start

- Install the macro lens before using this function. Refer to the quick start guide of the macro lens for detailed operation.
- The macro lens is not included in the package. Please purchase it separately. The recommended model is HM-P201- MACRO.

Steps

- 1. Select 📓 from the main menu.
- 2. Go to Local Settings \rightarrow Capture Settings \rightarrow Macro Mode.
- 3. Tap **D** to enable the function.

iNote

- After the macro mode is enabled, only the emissivity can be modified. Parameters such as distance, image mode, parallax correction, and measurement range cannot be modified.
- After this function is disabled, the parameters will be restored to the previous set values, and the measurement range will be set to auto switch.

Chapter 10 Thermal View APP Connection

The device supports both Wi-Fi connection and hotspot. Connect the device to HIKMICRO Viewer, and you can control the device via mobile client.

10.1 Connect via Wi-Fi

Before You Start

Download and install HIKMICRO Viewer on your phone.

Steps

- 1. Select 📱 from the main menu.
- 2. Go to Local Settings \rightarrow Connect \rightarrow WLAN.
- 3. Tap **O** to enable Wi-Fi, and the searched Wi-Fi will be listed.

<	WLAN	
WLAN		
Available Networks)		(ſŗ
1.		
TestSS		(ŀŗ
		((i)

Figure 10-1 Wi-Fi List

- 4. Select the Wi-Fi to connect to. A soft keyboard is displayed.
- 5. Enter the password by touching the screen.

[⊥]iNote

- DO NOT tap **space** in your password, or the password may be incorrect.
- Please tap 🤄 to enter password into the password field.

- 6. Tap 🔽 to save.
- 7. Launch the App and follow the startup wizard to create, and register an account.
- 8. Add the device to online devices.

Result

You can view the live view, capture snapshots, and record videos via the App.

10.2 Connect via Hotspot

Before You Start

Download and install HIKMICRO Viewer on your phone.

Steps

- 1. Select 📱 from the main menu.
- 2. Go to Local Settings \rightarrow Connect \rightarrow Hotspot.
- 3. Tap **O** to enable the hotspot function. The hotspot name is the last 9 digits of the device serial No.
- 4. Tap **Set Hot Spot**. A soft keyboard is displayed.



Figure 10-2 Set Hotspot

5. Set the password for the hotspot.

iNote

- DO NOT tap **space** in your password, or the password may be incorrect.
- The password should at least contain 8 digits, consisting of numbers and characters.
- Please tap 🤄 to enter password into the password field.

6. Tap 🔽 to save.

- 7. Connect your phone to the hotspot of the device.
- 8. Launch the App and follow the startup wizard to create, and register an account.
- 9. Select Wi-Fi configuration in the App, and enter the serial number of device to add the device. Refer to the user manual of the client for details.

Result

You can view the live view, capture snapshots, and record videos via the App.

Chapter 11 Maintenance

11.1 View Device Information

Go to **Local Settings** \rightarrow **Device Information** to view the device information.

11.2 Set Date and Time

Steps

- 1. Go to Local Settings \rightarrow Device Settings \rightarrow Time and Date.
- 2. Set the date and time.
- 3. Press \lt to save and exit.

iNote

Go to Local Settings \rightarrow Device Settings \rightarrow Display Settings to enable or disable time and date display.

11.3 Upgrade Device

Steps

- 1. Connect the device to your PC with cable and open the detected disk.
- 2. Copy the upgrade file and paste it to the root directory of the device.
- 3. Disconnect the device from your PC.
- 4. Reboot the device and then it will upgrade automatically. The upgrading process will be displayed in the main interface.

iNote

After upgrading, the device reboots automatically. You can view the current version in Local Settings \rightarrow Device Settings \rightarrow Device Information.

11.4 Restore Device

Go to Local Settings \rightarrow Device Settings \rightarrow Device Initialization to initialize the device and restore default settings.

Chapter 12 Appendix

12.1 Common Material Emissivity Reference

Material	Emissivity
Human Skin	0.98
Printed Circuit Board	0.91
Concrete	0.95
Ceramic	0.92
Rubber	0.95
Paint	0.93
Wood	0.85
Pitch	0.96
Brick	0.95
Sand	0.90
Soil	0.92
Cloth	0.98
Hard Paperboard	0.90
White Paper	0.90
Water	0.96

12.2 Device Command

Scan the following QR code to get device common serial port commands. Note that the command list contains the commonly used serial port commands for HIKMICRO thermal cameras.



12.3 Device Communication Matrix

Scan the following QR code to get device communication matrix. Note that the matrix contains all communication ports of HIKMICRO thermal cameras.



12.4 FAQ

Scan the following QR code to get device common FAQ.





UD30268B